

Comandos IPMITOOL

Link: <https://wiki.joeplaa.com/applications#ipmitool>

Installation

```
apt update && apt install ipmitool
```

Configuration

Create a user with ipmi permissions only in Dell iDrac or HP iLO

Commands

“ <https://www.tzulo.com/crm/knowledgebase/47/IPMI-and-IPMITOOL-Cheat-sheet.html> ”

Get all sensor data

```
ipmitool -I lanplus -H <iDRAC IP> -U <iDRAC user> -P <iDRAC password> sdr list full
```

Get temperature(s)

```
ipmitool -I lanplus -H <iDRAC IP> -U <iDRAC user> -P <iDRAC password> sdr type Temperature
```

Get fanspeed(s)

```
ipmitool -I lanplus -H <iDRAC IP> -U <iDRAC user> -P <iDRAC password> sdr type Fan
```

Or

```
ipmitool -I lanplus -H <iDRAC IP> -U <iDRAC user> -P <iDRAC password> sdr get Fan1 Fan2 | grep "Sensor Reading"
```

Get power supply info

```
ipmitool -I lanplus -H <iDRAC IP> -U <iDRAC user> -P <iDRAC password> sdr type 'Power Supply'
```

Enable auto fan control / disable static mode (Dell)

```
ipmitool -I lanplus -H <iDRAC IP> -U <iDRAC user> -P <iDRAC password> raw 0x30 0x30 0x01 0x01
```

Enable static fan control / disable auto mode (Dell)

```
ipmitool -I lanplus -H <iDRAC IP> -U <iDRAC user> -P <iDRAC password> raw 0x30 0x30 0x01 0x00
```

Set fanspeed 20% (Dell)

See the script for other speeds. The last 4 characters differ.

```
ipmitool -I lanplus -H <iDRAC IP> -U <iDRAC user> -P <iDRAC password> raw 0x30 0x30 0x02 0xff  
0x14
```

Change system state

```
ipmitool -H <iDRAC IP> -U <iDRAC user> -P <iDRAC password> chassis power  
<status|on|off|cycle|reset>
```

Revision #1

Created 4 May 2024 23:30:42 by Administrador

Updated 16 May 2025 11:49:54 by Administrador